Instruction SOS-Beacon



1 Introduction



Please read the safety instructions before commissioning. Further information can be found on the Swissphone website at:

www.swissphone.com

1.1 Safety Instructions

- This product must not be used in a potentially explosive environment, such as an area designated as an ATEX Zone, or similar.
- Keep the SOS-Beacon out of the reach of children.
- The labels must not be removed.
- The battery should not be changed under static charge (ESD protected environment
- The battery monitoring is carried out via the SOS-Portal.
- The battery protection strip must be removed before commissioning.

1.2 Technical data

Bluetooth Low Energy Technology

Transmission power: -21 dBm, +5 dBm (adjustable in

13 steps), default -5dBm

Frequency: 2,4 GHz Battery type: CR2477 - 3V

1.3 Manufacturer

Swissphone Wireless AG Fälmisstrasse 21 CH-8833 Samstagern

1.4 Declaration of conformity

The device complies with the European Radio Directive RED 2014 / 53 / EU (Radio Equipment Directive). You can request a copy of the declaration of conformity at info@swissphone.com.

1.5 Disposal

The operator is obliged to comply with local laws regarding equipment and battery disposal. This applies in particular to the decommissioning of the device as well as to battery replacement.

2 Installation and maintenance

2.1 Assembly


Loosen the SOS-Beacon from the base by turning it 1/8 turn counterclockwise. Tighten the base by means of 1-2 screws, there are 4 prepared holes in the base.

Then place the SOS-Beacon on the base and fix it by turning it 1/8 turn clockwise.







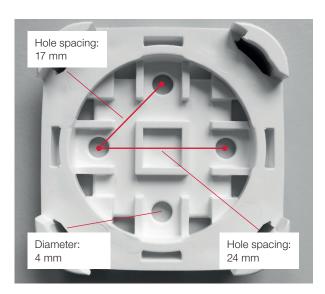

EN 08/2020 0343245 V1 WEC Information is provided subject to technical modifications, errors and typing errors

2.2 Inserting the battery and changing the battery

Lift up the lid of the beacon, on one side there is a bar to help hold the base plate.

Remove the battery or place the new and full battery in the bottom of the SOS-Beacon housing with the negative pole facing up.

Gently press the cover onto the SOS-Beacon until it clicks into place.







ATTENTION

Observe precautionary measures regarding the handling of electro-statically sensitive devices. Do not touch the circuit board without protection.

3 General Information

3.1 Disclaimer

Swissphone gives no liability or guarantee in connection with the content of this document. We reserve the right to make changes to the contents of the operating instructions for the SOS-Beacon.

3.2 Terms of use

The information contained in this document is protected by copyright and confidential and may not be passed on or reproduced without the prior written consent of Swissphone Wireless AG.

3.3 Applicable law

These terms of use are subject exclusively to Swiss law. The Vienna Convention on the International Sale of Goods is excluded. The General Terms of Business of Swissphone Wireless AG apply.



Swissphone Wireless AG
Fälmisstrasse 21
CH-8833 Samstagern
Tel. +41 44 786 77 70
Fax +41 44 786 77 71
E-Mail info@swissphone.com