

Instruction

SOS-Beacon

1 Introduction



Please read the safety instructions before commissioning. Further information can be found on the Swissphone website at:

www.swissphone.com

1.1 Safety Instructions

- This product must not be used in a potentially explosive environment, such as an area designated as an ATEX Zone, or similar.
- Keep the SOS-Beacon out of the reach of children.
- The labels must not be removed.
- The battery should not be changed under static charge (ESD protected environment)
- The battery monitoring is carried out via the SOS-Portal.
- The battery protection strip must be removed before commissioning.

1.2 Technical data

Bluetooth Low Energy Technology

Transmission power: -21 dBm, +5 dBm (adjustable in 13 steps), default -5dBm

Frequency: 2,4 GHz

Battery type: CR2477 - 3V

1.3 Manufacturer

Swissphone Wireless AG
Fälmisstrasse 21
CH-8833 Samstagern

1.4 Declaration of conformity

The device complies with the European Radio Directive RED 2014 / 53 / EU (Radio Equipment Directive). You can request a copy of the declaration of conformity at info@swissphone.com.

1.5 Disposal

The operator is obliged to comply with local laws regarding equipment and battery disposal. This applies in particular to the decommissioning of the device as well as to battery replacement.

2 Installation and maintenance

2.1 Assembly

Loosen the SOS-Beacon from the base by turning it 1/8 turn counterclockwise. Tighten the base by means of 1-2 screws, there are 4 prepared holes in the base. Then place the SOS-Beacon on the base and fix it by turning it 1/8 turn clockwise.

