

User Manual

DE925
Alphanumeric
POCSAG pager




SWISSPHONE

Contents

Introduction	3
Switching on and off	4
Display	5
Buttons	6
Menu structure	7-8
Menu	9
Messages	10-15
Alerting	16-17
Alarm clock	18-19
Status display	20-21
Alert options	22-24
Settings	25-30

Introduction

We would like to congratulate you on your new receiver. In purchasing the new Swissphone DE925 you have chosen a high quality device. The three-button operated Swissphone DE925 is a noteworthy product thanks to its combination of attractive design, great flexibility and high quality. There are several different configurations available for your DE925, so some functions described in this manual may not be available on your device.

This manual provides information to help you operate your device to its optimal ability; therefore you should always keep it handy.

We hope you enjoy reading this manual and using your Swissphone DE925.



Special information about additional and useful functions.



Warning



Important information

- **Do not use this device in explosive areas!**
- **Do not open the device or remove any labels.**

The device meets the provisions of the European directive RED 2014/53/EU

(«Radio Equipment Directive»).

You can request a copy of the declaration of conformity from info@swissphone.com.

Switching on and off

Switching on

To manually switch on the DE925, press and hold any of the three buttons at the front until the start-up screen appears.

Switching on with alarm clock

When the alarm function is activated the Swissphone DE925 turns itself on at the chosen alert time and the alarm will sound.

See chapter «Setting the alarm clock» for further information about how to set the alarm clock.



Switch lock

If the switch lock is activated, you have to enter a 4 digit PIN code after switching on the receiver. Choose the code with the navigation buttons and confirm it with the «confirmation button».

 
If the code was entered incorrectly for 10 times, the pager will be locked. You then have to unlock the pager with the PSW. Otherwise the receiver operates in an emergency program (alarms will be received without text).

Switching off

Starting position: stand-by mode

- Press the lower navigation button and the menu «Messages» is displayed
- Select «Switch off» by pressing the lower navigation button
- Press the confirmation button. The question «Are you sure?» appears
- Use the navigation buttons to select «yes» or «no» and then confirm

Display

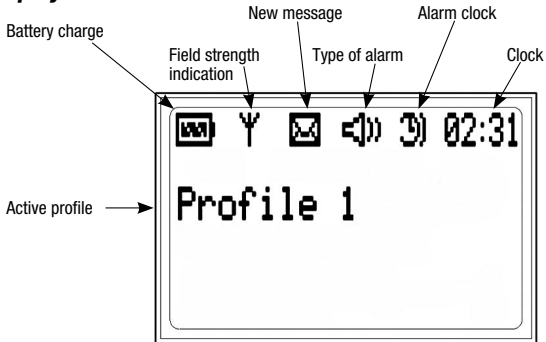


Field strength indication (this feature requires periodic message sending)
If the receiver is out of range, the field strength indicator appears on the display.

Buttons

Confirmation button

 (Read messages, confirm alarm, confirm menu selection)

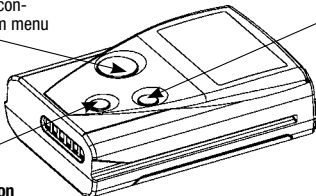

Lower navigation button

(Display main menu, scroll downward in the menu or to the left through the message selection, change settings)

Upper navigation button

(Alternatively, display user, status information and battery charge, scroll upward in the menu or to the right through the message selection, change settings. Holding the upper navigation button will exit a selected submenu again.)

Menu structure

Starting position: stand-by mode

MESSAGE

- **Read**
 - └ Message selection
- **Delete**
 - └ Message selection
- **Delete all**
- **Protect**
 - └ Message selection

ALERT

- **Loud**
- **Discrete**
- **Silent**
- **Off**

ALARM CLOCK

- **On / Off**
 - └ Selection
- **Set time**
 - └ HH:MM
- **Snoozer**
 - └ Number * time delay

STATUS

- **Status info**
- **User info**

By pressing the confirmation button, the message selection for «Read messages» is displayed directly.

By pressing the lower navigation button, the main menu is displayed.

ALERT OPTIONS

- **Profile**
 - └ Selection
- **Alertpattern**
 - └ RIC=>pattern
- **Call reminder**
 - └ Selection
- **EA-Monitor**
 - └ Selection
- **DynGo System**
 - └ Information
- **Out of range**
 - └ Selection

SETTINGS

- **Set time**
 - └ HH:MM
- **Set date**
 - └ Day DD.MM.YY
- **Language**
 - └ Selection
- **Light**
 - └ Selection
- **Battery**
 - └ Selection
- **LCD contrast**
 - └ Set
- **ECO mode**
 - └ Selection
- **Display**
 - └ Selection

 
SWITCH OFF

- └ Are you shure?

Menu

By pressing the lower navigation button, the main menu is displayed. Pressing the lower navigation button will scroll forward and downward through the menu.

Pressing the upper navigation button will scroll backward and upward through the menu. Pressing the confirmation button confirms the menu selection. Holding the upper navigation button will exit a selected submenu again.

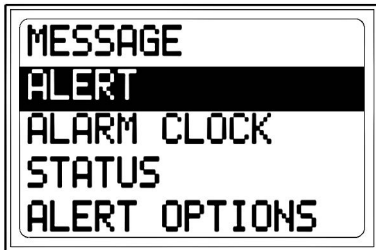

Messages

Individual received messages are alerted, displayed and stored in the memory. Single new (unread) messages are also identified by an envelope icon. The individual saved messages are «read», «delete» and «protect». They are visualized via icons and sorted by the time they were received. When a new message is saved all the messages are moved to the right by one position with the oldest message being stored into the automatic storage tray if the memory is already full. Protected messages are retained in the memory.

Reading new messages

New messages appear on the display immediately.

- Alerting is stopped by pressing any button
- By pressing the lower navigation button, you can read the messages. A message is considered as being read once you have scrolled to the end of it. At the end of the release time the receiver automatically reverts back to stand-by mode




Call reminder

If your device has been configured with call reminder any unread messages are alerted again after the pre-set time (see chapter «Alarm options»). The call reminder is switched off as soon as the particular message(s) are read.

Reading messages

Starting position: stand-by mode

- Press the confirmation button to display messages. The cursor is then on the most recent message.

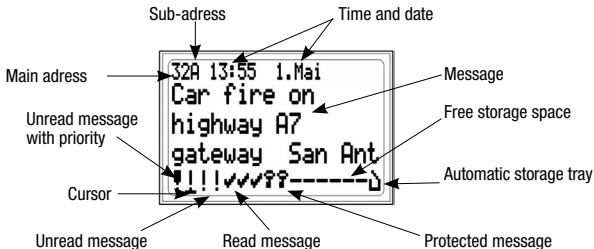

- Press the upper navigation button to select the next message
- Press the confirmation button to read the selected message. The first three lines of the message are displayed
- Press the lower navigation button to read the whole message



Reading messages with the confirmation button

You also have the possibility to scroll directly through and read all messages by pressing the confirmation button.



Simple operation

If your receiver is configured for simple operation, you will get directly into the most recent message by using the confirmation button. As soon as you have read it, the next unread message is displayed. In order to reach the main menu, press both navigation buttons simultaneously for at least two seconds.



Key lock

If the key lock is activated, all buttons are locked and you cannot change any settings. To unlock the function, press both navigation buttons simultaneously. In stand-by mode the key lock will automatically switch on after ten seconds without any keypress. In an emergency, you can read the alert message by pressing the confirmation button without deactivating the key lock.



Illuminated display

To switch on display illumination manually, hold the confirmation button for one second. To switch the display off again, hold the confirmation button for one second. The display will be switched off automatically when the receiver returns back to stand-by mode.

Message folder

Title of the message folder

1 to 2 message folders



The DE925 supports up to two message folders, depending on how it has been programmed. When selected the title of the message folder is displayed in the menu list. Press the confirmation button in order to display the messages in their folder. They can be read by pressing the lower navigation button. The messages can then be read with the help of the lower navigation button.



New (unread) messages in the message folders are not highlighted by means of an envelope icon.

Deleting individual messages

Starting position: stand-by mode

- Press the lower navigation button and the «Message» menu is displayed
- Press the confirmation button
- Select «Delete» by pressing the navigation button and press the confirmation button
- Select the message you want to delete by pressing the navigation button

Deleting all messages

Starting point: stand-by mode

- Press the lower navigation button and the menu «Messages» is displayed
- Press the confirmation button
- Select «Delete all» by pressing the lower navigation button to delete all messages
- Press the confirmation button. The question appears, «Are you sure?»
- Press the confirmation button again to delete all messages or one of the navigation buttons to abort the process

Protecting messages

Protected messages are not overwritten by more recent messages and therefore remain until they are deleted.

Starting position: stand-by mode

- Press the lower navigation button to display the menu «Messages»
- Press the confirmation button
- Select «Protect» by pressing the lower navigation button
- Press the confirmation button
- Select the required message by pressing the lower navigation button
- Press the confirmation button to protect the message

Alerting

Alarm settings differentiate between messages with and without priority. This depends on how the particular receiver address (RIC) is configured.

In the alarm options menu the Swissphone DE925 can be configured to «loud» (loud alerting with vibration), «discrete» (mini beep with vibration), or «silent» (vibration only) and «off» (visual display only).

Starting position: stand-by mode











- Press the lower navigation button and the MESSAGES menu is displayed
- Select «Alert options» by pressing the lower navigation button
- Press the confirmation button
- Select the required alarm option by pressing the lower navigation button
- Press the confirmation button to accept the selected option



Messages with priority

With loud alerting the alarm is twice as long for messages with priority than for normal messages. With all other types of alerting messages with priority are firstly signalled by means of a vibrator and then loudly with a vibrator.

The following table illustrates the type of alerting for each configuration.

	Symbol	Alerting	Alerting of messages with priority
Loud		 Standard signalling	 Doubled standard signalling
Discrete		 10 seconds vibration then mini beep	 10 seconds vibration, then doubled standard signalling
Silent		 10 seconds vibration	 10 seconds vibration, then doubled standard signalling
Off			 10 seconds vibration, then doubled standard signalling

Acoustical alerting 

Vibration 



Do not hold the device next to your ear. The alarm tones are very loud and can (permanently) damage your ears.

Alarm clock

Starting position: stand-by mode

- Press the lower navigation button and the MESSAGES menu is displayed
- Select «Alarm clock» by pressing the lower navigation button
- Press the confirmation button

Switching the alarm clock on and off

Starting position: ALARM CLOCK menu

- Press the confirmation button to select «On/Off»
- Select «On» or «Off» by pressing the navigation buttons
- Accept your selection by pressing the confirmation button



Quitting alarm clock

The alarm tone is switched off as soon as any key is pressed. The alarm clock icon will blink as long as the repeat alarm is active. After the alarm repeat period the alarm tone starts again. If the confirmation key is pressed for at least two seconds the alarm tone is switched off for the whole day. The alarm, however, remains switched on and will sound, once again, the next day.

Setting the alarm clock

Starting position: ALARM CLOCK menu

- Press the lower navigation button to select the «Set time» menu
- Press the confirmation button
- Set the time (hours and minutes) by pressing the navigation buttons and confirm it

Alarm repeat

Starting position: ALARM CLOCK menu

- Select «Snoozer» by pressing the lower navigation button
- Press the confirmation button
- Select the number of repeats and the time interval in minutes by pressing the navigation buttons and confirm it



Switching-on with alarm clock


If the alarm clock is switched on and the receiver is switched off, the Swissphone DE925 will be switched on at the alarm time set and the alarm clock will sound.

Status Display

Starting position: stand-by mode

- Press the lower navigation button and «Messages» is displayed
- Select «Status» by pressing the lower navigation button
- Press the confirmation button

The following screen appears on the display:

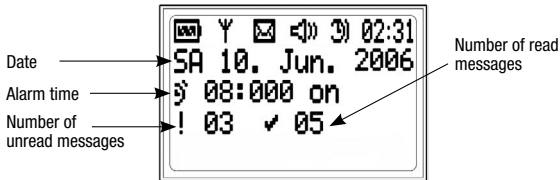

- If the lower navigation button is pressed, the battery charge is displayed. Otherwise the Swissphone DE925 goes into stand-by after the release time.



Direct display of the status screen and of the battery charge:

If the receiver is in stand-by, hold the upper navigation button to see the status information, the battery charge and user information.

Alert options

Starting position: stand-by mode

- Press the lower navigation button and «Messages» is displayed
- Select «Alert options» by pressing the lower navigation button
- Press the confirmation button

User profiles

Starting position: ALERT OPTIONS menu

- Select «Profile» by pressing the confirmation button
- Select a user profile by pressing the lower navigation button
- Accept your selection with the confirmation button
- Switch advanced profiles on or off by pressing the lower navigation button
- Press the confirmation button

Alarm tones

Starting position: ALERT OPTIONS menu

- Press the lower navigation button to select the «Alertpattern» menu
- Press the confirmation button
- Select a RIC with sub-address by pressing the navigation buttons
- Press the confirmation button
- Select a melody by pressing the navigation buttons. The melody is played during the selection
- Press the confirmation buttons

Call reminder

Starting position: ALERT OPTIONS menu

- Press the lower navigation button to select «Call reminder»
- Press the confirmation button
- Select between «loud» and «Discrete» by pressing the navigation buttons
- Press the confirmation button

EA Monitor

This function is only activated if your system supports «express alerting»

Starting position: ALERT OPTIONS menu

- Select «EA monitor» by pressing the lower navigation button
- Press the confirmation button
- Choose between «off», «discrete» and «loud» by pressing the navigation buttons
- Press the confirmation button

Acoustic field strength alarm

Starting position: ALARM OPTIONS menu

- Press the lower navigation button to select «Out of range»
- Press the confirmation button
- Switch the field strength alarm on or off by pressing the navigation buttons
- Press the confirmation button

Settings

Starting position: stand-by mode

- Press the lower navigation button and «Messages» is displayed
- Select «Settings» by pressing the lower navigation button
- Press the confirmation button

Setting the clock

Starting position: SETTINGS menu

- Press the confirmation button to select «Set time»
- Set the time (hours and minutes) by pressing the navigation buttons and confirm it

Setting the date

Starting position: SETTINGS menu

- Select «Set date» by pressing the lower navigation button
- Press the confirmation button
- Set the date (year, month and day) by pressing the navigation buttons and confirm it

Language

Starting position: SETTINGS menu

- Select «Language» by pressing the lower navigation button
- Press the confirmation button
- Select one of the pre-set languages by pressing the navigation buttons
- Press the confirmation button

Light

If active, the background illumination is switched on by each operation.

Starting point: SETTINGS menu

- Select «Light» by pressing the lower navigation button
- Press the confirmation button
- Activate or deactivate the settings by pressing the lower navigation button
- Press the confirmation button

Selecting the type of battery

Starting position: SETTINGS menu

- Select «Battery» by pressing the scroll button
- Press the confirmation button
- Select «Alcaline» or «NiMH» by pressing the scroll button
- Press the confirmation button

Alcaline: Dry battery

NiMH: Nickel-metal hydride battery

NiMH plus: Low self-discharge NiMH battery

Please ensure that the installed type of rechargeable battery corresponds to the settings in the device.

This ensures optimal indication of the battery charge level.

Battery charge indication



80 % – 100 %



33 % – 80 %



13 % – 33 %



0 % – 13 %

When the receiver is switched on, the battery icon remains visible and indicates the amount of energy still available. Period of operation can be up to 1000 hours, depending on the power supply, network configuration and the type of operation programmed.

When the battery is virtually being used up, the empty battery icon starts to blink and a regular reminder tone sounds. There is still an operating time of at least 24 hours available. By pressing the confirmation button, the battery alarm is switched off. The empty battery icon, however, continues to blink.



If the ECO mode is switched on, the battery icon is not visible in the stand-by mode.

LCD contrast

Starting position: SETTINGS menu

- Select «LCD contrast» by pressing the lower navigation button
- Press the confirmation button
- Set the LCD contrast by pressing the navigation buttons
- Press the confirmation button

ECO mode

If ECO mode is switched on the display will be completely switched off in stand-by. No status icons are displayed. The life of the battery can be considerably increased in this way.

Starting position: «Settings» menu

- Select «ECO mode» by pressing the lower navigation button
- Press the confirmation button
- Switch Eco on or off by pressing the navigation buttons
- Press the confirmation button

Display

The message display can be set to 16, 20 or 21 characters per line.

 
Starting position: «Settings» menu

- Use the lower navigation button to select «Display»
- Press the confirmation button
- Use the navigation buttons to select the desired number of characters per line
- Press the confirmation button

After having selected the number of characters per line, choose if the status line is visible or not during reading the messages. If the status line is visible, you will see if there are unread messages available.

Changing the power source

Remove the clip holster and open the cover on the back of the receiver. Insert the power source into the compartment. Ensure that the battery position matches contacts perfectly before you close the back cover.

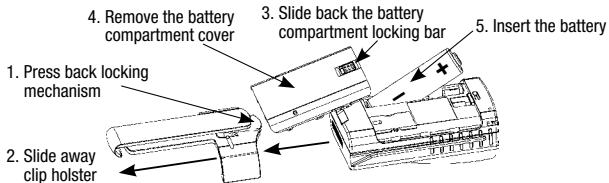

The following power sources of the size AA, or., L6, or AM3 (Mignon) can be used:

- Alkaline: leak-proof alkaline-dry batteries



Alkaline batteries should not be charged or recharged. Danger of explosion!

- Rechargeable batteries: Nickel metal hydride

For safety reasons, to re-charge use a charger from the original Swissphone range of accessories.



Warning

- Do not dispose batteries and rechargeable batteries in fire. Risk of explosion!
- Keep children under three years away from batteries.

The Swissphone DE925 receiver is automatically switched on when the battery is inserted. Afterwards choose the type of the battery (dry cell or rechargeable battery). A test is done whilst all loads in the device are activated temporarily. The device then is ready to receive messages.



Attention:

For optimal indication of the battery or rechargeable battery levels, the type of rechargeable battery installed has to be set using the operation in the device (see chapter: «Selecting the type of rechargeable battery»).

If you use a rechargeable battery with another capacity, change it with the programming tool.



Swissphone Wireless AG, Fälmisstrasse 21, CH-8833 Samstagern, Switzerland

Customer Service:

© Swissphone Wireless AG
Reserves the right to make technical changes without prior notification.