

Instruction

SOS-Button Vibra

1 Introduction



Please read the safety instructions before commissioning. Further information can be found on the Swissphone website at:

www.swissphone.com

1.1 Safety Instructions

- This product must not be used in a potentially explosive environment, such as an area designated as an ATEX Zone, or similar.
- Keep the SOS-Button out of the reach of children.
- The labels must not be removed.
- The battery change should not be carried out under static (ESD protected environment).
- The battery monitoring is carried out via the SOS-Portal.
- Prior to commissioning, the battery must be inserted and the button integrated into the SOS-Portal or the SOS-Mobile app.

1.2 Technical daten

Bluetooth Low Energy Technology

Transmission power: 0 dBm

Frequency: 2,4 GHz

Battery type: CR2032 - 3V

1.3 Manufacturer

Swissphone Wireless AG

Fälmisstrasse 21

CH-8833 Samstagern

1.4 Declaration of conformity

The device complies with the European Radio Directive RED 2014 / 53 / EU (Radio Equipment Directive). You can request a copy of the declaration of conformity at info@swissphone.com.

1.5 Disposal

The operator is obliged to comply with local laws regarding equipment and battery disposal. This applies in particular to the decommissioning of the device as well as to battery replacement.

2 Alarm triggering



Pressure point of the button

Test alarm: press 1x briefly

System feedback:

if test alarm received, button will vibrate briefly, once

Emergency call: press briefly at least 3 times (within 3 seconds) or hold down for at least 1.5 seconds

System feedback:

on receiving an emergency call, button will vibrate briefly, 3 times

3 Mounting / Dismounting belt clip

Here the disassembly is shown. The assembly is carried out in reverse order.

- 1) Press the belt clip together slightly:



- 2) Pull out the belt clip from the side:

