

# Instruction

## SOS-Button Vibra

### 1 Introduction



Please read the safety instructions before commissioning. Further information can be found on the Swissphone website at:

[www.swissphone.com](http://www.swissphone.com)

#### 1.1 Safety Instructions

- This product must not be used in a potentially explosive environment, such as an area designated as an ATEX Zone, or similar.
- Keep the SOS-Button out of the reach of children.
- The labels must not be removed.
- The battery change should not be carried out under static (ESD protected environment).
- The battery monitoring is carried out via the SOS-Portal.
- Prior to commissioning, the battery must be inserted and the button integrated into the SOS-Portal or the SOS-Mobile app.

#### 1.2 Technical daten

Bluetooth Low Energy Technology

Transmission power: 0 dBm

Frequency: 2,4 GHz

Battery type: CR2032 - 3V

#### 1.3 Manufacturer

Swissphone Wireless AG

Fälmisstrasse 21

CH-8833 Samstagern

#### 1.4 Declaration of conformity

The device complies with the European Radio Directive RED 2014 / 53 / EU (Radio Equipment Directive). You can request a copy of the declaration of conformity at [info@swissphone.com](mailto:info@swissphone.com).

#### 1.5 Disposal

The operator is obliged to comply with local laws regarding equipment and battery disposal. This applies in particular to the decommissioning of the device as well as to battery replacement.

### 2 Alarm triggering



Pressure point of the button

**Test alarm:** press 1x briefly

System feedback:

*if test alarm received, button will vibrate briefly, once*

**Emergency call:** press briefly at least 3 times (within 3 seconds) or hold down for at least 1.5 seconds

System feedback:

*on receiving an emergency call, button will vibrate briefly, 3 times*

### 3 Mounting/Dismounting belt clip

Here the disassembly is shown. The assembly is carried out in reverse order.

- 1) Press the belt clip together slightly:



- 2) Pull out the belt clip from the side:



## 4 Battery replacement

Precondition: Belt clip must be removed.

- 1) Closed battery cover:




- 2) Use a coin to turn the lid 30 degrees counterclockwise.



- 3) Lift the battery cover with a small screwdriver. When inserting the battery, the positive pole of the battery must point upwards.

- 4) When reassembling, put the sealing ring back between the housing and the battery cover.

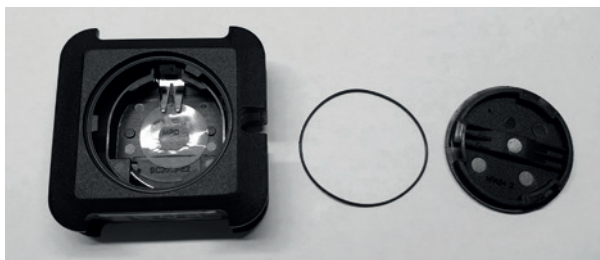

## 5 General Information

### 5.1 Disclaimer

Swissphone gives no liability or guarantee in connection with the content of this document. We reserve the right to make changes to the contents of the operating instructions for the SOS-Button.

### 5.2 Terms of use

The information contained in this document is protected by copyright and confidential and may not be passed on or reproduced without the prior written consent of Swissphone Wireless AG.

### 5.3 Applicable law

These terms of use are subject exclusively to Swiss law, excluding its rules on private international law. The General Terms and Conditions of Swissphone Wireless AG apply.